

	UNIT 7, 11-17 Canvale Road PO BOX 1616 Canning Vale WA 6155 www.locksafe.com.au	ORDERS / ENQUIRIES: PHONE: 08 9455 7255 FAX: 08 9455 7244 info@locksafe.com.au	<b>Gremarnig Holdings          Pty Ltd</b> Trading as <b><u>Locksafe Industrial          Safety Equipment</u></b> ABN: 24 109 254 293 ACN: 109 254 293
	ACCOUNTS ENQUIRIES: PO BOX 569 Singleton NSW 2330	Phone: 02 6571 1232 Fax: 02 6571 1368	

January 2011

Lockable Brackets to suit Caterpillar and Cole Hersee Switches  
**(Combination Unit for Battery and Starter Isolation)**

**LS 13014**

- Drill the holes to mount the bracket and unit in required area.
- Remove the switch-retaining nut leaving the switch in its mounting position
- Slip the bracket partially on to the switch boss.
- Thread the prongs of the Key thru the switch locking washer and retaining nut
- Locate the key into the switch slot, tighten locknut to secure the bracket and switch assembly.
- Fit cole hersee switch and yellow handle; use this for the starter isolator.
- Connect aux terminals to starter solenoid feed.
- Connect LED to fused pos feed and to switched side of battery switch.
- Connect cables to switches, support switch during tightening.
- Once installed always ensure isolation is effective before work.
- Manufactured from 1.6 stainless steel.

