



Thinksafe. Worksafe. Locksafe

Gremarnig Holdings Pty Ltd T/As
Locksafe Industrial Safety Equipment

ABN: 24 109 254 293
ACN: 109 254 293

FITTING INSTRUCTIONS

LOCKABLE BRACKET TO SUIT HITATCHI SWITCH 35-221-130-R-900 LS11039-01 LOCKING BRACKET

Installation

1. Begin by disengaging the handle from the switch. Remove the black cover with the negative and positive indicators (image 1). Now remove the green shaft extension (Image 2), leaving the white square shaft on the switch exposed.
2. Fit the bracket onto the switch, ensuring the square section of the lockout shaft lines up with the shaft on the switch (images 3 & 4).
3. Rotate the bracket handle while engaged with the switch ensuring the 3 turn points align with the lockout tags on the bracket (image 5).
4. If these all align proceed to fit and fasten the bolts between the switch and the locking bracket (image 6).

If upgrading from Version 2 please follow the below instructions First

5. With the Bracket not installed use a pin punch to remove the wave pin, securing the handle to the assembly.
6. Install Supplied Spring onto the shaft followed by washer. (image 3) Note – Washer should be installed after the spring.
7. Reinsert the shaft in the isolation bracket and refit handle to the shaft with the wave pin.

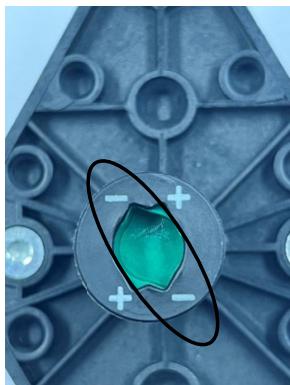


Image 1



Image 2



Image 3



Image 4



Image 5

HANDLE
ALIGNED
WITH RIGHT
LUG



Image 6

Head Office
7/11-17 Canvale Road
CANNING VALE WA 6155

Mail
PO Box 29, Hunter Region,
Mail Centre NSW 2310

Email
info@locksafe.com.au
accounts@locksafe.com.au

Mobile
P: +61 8 9455 7255